

# **HFB-FO-LON Series**

Lonworks Fiber Optic Modem

Datasheet & User Manual





## **Table of Contents**

#### 1. Overview

#### 1.1 Introduction

The LONWORKS Fiber Optic Modem is a multi-master and high performance Field bus Control System (FCS). Our Fiber Optic Modem uses the fiber cable as its transmission medium and utilizes Optical Fiber modulation/demodulation technology to changes the electric medium into a light medium transmission.

The LONWORKS Fiber Optic Modem product eliminates many of the disadvantages of copper cable. Examples of these disadvantages are EMI/RFI, ground loops (electrical isolation with fiber), high attenuation (high signal loss), short transmission distance between nodes of a system, and potential lightning damage.

The LONWORKS Fiber Optic Modem can be widely used, such as Industrial Controls, Intelligent Transportation Systems (ITS), Industrial Networking, Supervisory Control and Data (SCADA) and so on

#### 1.2 Technical Specification

CAN BUS		
Connectors Terminal		
Standard	LONWORKS(LonTalk)	
Data Rate	78.6Kbps	
Extended Distance	0~20Km	

OPTICAL		
Number of Fibers	2	
Wavelength	850/1310nm	
Fiber Type	62.5/125µm(MM), 9/125µm(SM)	
Distance	0 ~ 2Km OR 0-20 Km	
Connector Type	ST/PC	

GENERAL		
Operating Temperature	-30~ 70°C / -30 ~ +158°F	
Operating Humidity	0 ~ 95% non-condensing	
Mean Time Between Failure (MTB)	> 70,000hrs	
Power Supply Adaptor	DC24V	
Dimensions (H ×L×W)	125(L)×110(W)×36(H)	

### 1.3 Warranty

- Repair
  - Please contact your local distributors when product is defective. Please apply RA in advance and prepay shipping cost when returning the defective product to us. We will pay the cost for sending it back to you.
  - □ Please attach a statement clearly describing the problem.
- We will repair defective product under warranty free of charge to our customer.
- 5 years warranty for product only.
- Any unauthorized modification of hardware and software voids the warranty.
- Warranty does not cover mishandling and/or abuse of the product.



### 2 Installation


#### 2.1 Package Contents

- OneLonworksFiber Optic Modem
- One power supply adaptor
- One User Manual

Please contact dealer or distributor if part is missing or damaged.

#### 2.2 Enclosure

**Fiber Optic Modem Top View** 

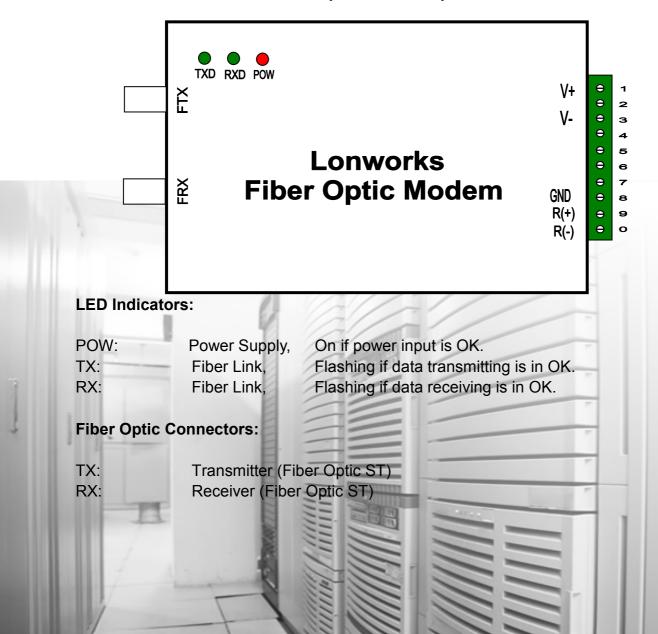

#### **Terminal Definition**

Terminal pins assignment:


1	 $\mathbf{V}$ +	Connect 24V power supply"+"
2	 N/A	N/A
3	V-	Connect 24V power supply"-"
4	N/A	N/A
5	N/A	N/A
6	N/A	N/A
7	N/A	N/A
8	GND	GND of LON
9	 <b>T</b> +	LONA
0	R-	LONB

#### 2.3 Install Methods

- 1. Switch off all power supply before installation.
- 2. Connect the local "TX" Fiber Optic to the remote "RX" Fiber Optic, the local "RX" to the remote "TX". And ensure that fiber is properly aligned to the receiving connector.



## 2.4 Install Application

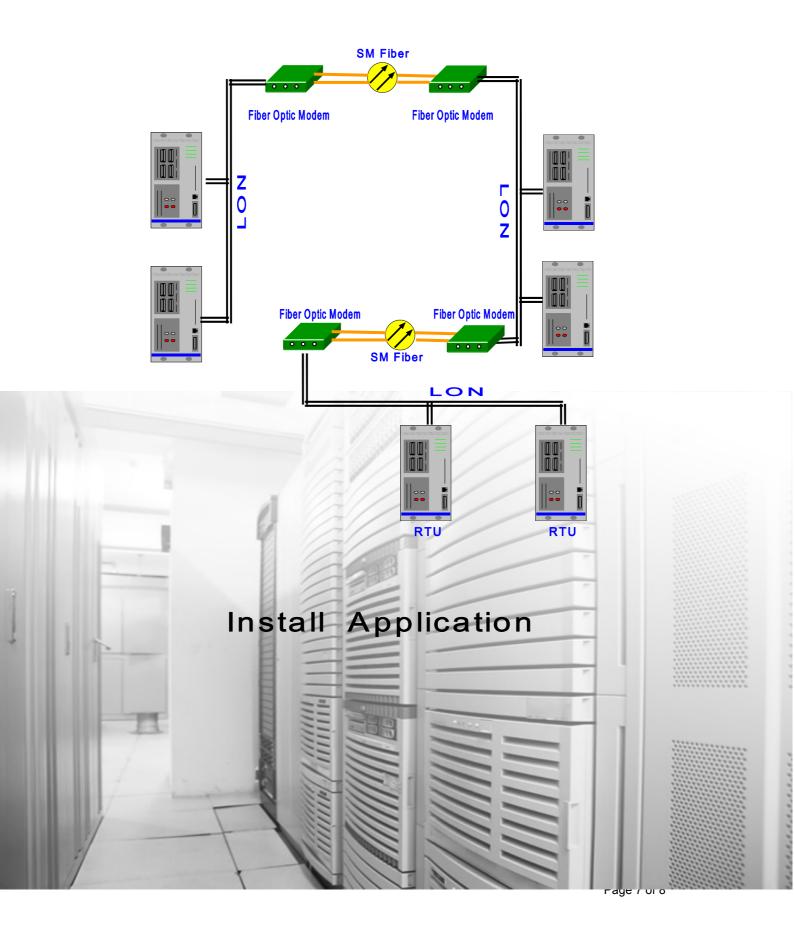

## 3 Dimensions (mm)

## Wall Mount:

