RS-232 FIBER MODEM USER MANUAL

RS-232 Fiber Optic Modem User Manual

Table of Contents

1. Overview	3
1.1 Introduction	3
1.2 Technical Specification	3
1.3 Warranty	4
2. Installation	5
2.1 Package Contents	5
2.2 Enclosure	5
2.3 Install Application	7
3. Dimensions	8

1. Overview

1.1 Introduction

The RS-232 Fiber Optic Modem is a multi-master and high performance Field bus Control System (FCS). Our Fiber Optic Modem uses the fiber cable as its transmission medium and utilizes Optical Fiber modulation/demodulation technology to changes the electric medium into a light medium transmission.

The Fiber Optic Modem product eliminates many of the disadvantages of copper cable. Examples of these disadvantages are EMI/RFI, ground loops (electrical isolation with fiber), high attenuation (high signal loss), short transmission distance between nodes of a system, and potential lightning damage.

The Fiber Optic Modem can be widely used, such as Industrial Controls, Intelligent Transportation Systems (ITS), Industrial Networking, Supervisory Control and Data (SCADA) and so on.

1.2 Technical Specification

CAN BUS		
Connectors	Terminal	
Standard	RS-232	
Data Rate	0 -115.2Kbps	
Extended Distance	0-1200Km	

OPTICAL	
Number of Fibers	2
Wavelength	850/1310nm(MM) 130/1550nm(SM)
Fiber Type	62.5/125µm(MM) 9/125µm(SM)
Distance	0 ~ 2Km(MM), 0 ~ 20Km(SM)
Connector Type	ST/PC, SC or FC as Option

GENERAL		
Operating Temperature	-25 ~ 60°C / -25 ~ +138°F	
Operating Humidity	0 ~ 95% non-condensing	
Mean Time Between Failure (MTBF)	> 70,000hrs	
Power Supply Adaptor	Input: 24V DC	
	Output: +5VDC, 1.5A	
Dimensions (H \times L \times W)	$125(L) \times 110(W) \times 36(H)$	

Page 3 of 8

1.3 Warranty

- Repair
 - Please contact your local distributors when product is defective. Please apply RA in advance and prepay shipping cost when returning the defective product to us. We will pay the cost for sending it back to you.
 - □ Please attach a statement clearly describing the problem.
- We will repair defective product under warranty free of charge to our customer.
- 5 years warranty for product only.
- Any unauthorized modification of hardware and software voids the warranty.
- Warranty does not cover mishandling and/or abuse of the product.

2 Installation


2.1 Package Contents

- One Fiber Optic Modem
- One power supply adaptor
- One User Manual

Please contact dealer or distributor if part is missing or damaged.

2.2 Enclosure

Fiber Optic Modem Top View

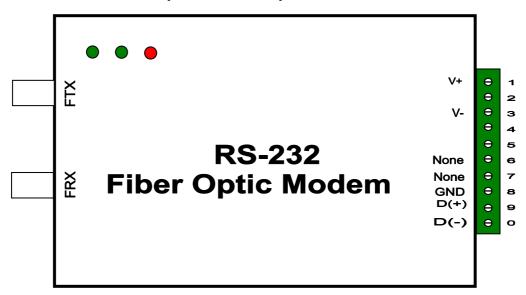

LED Indicators:

POW: Power Supply, On if power input is OK.

TX: Fiber Link, Flashing if data transmitting is in OK. RX: Fiber Link, Flashing if data receiving is in OK.

Fiber Optic Connectors:

TX: Transmitter (Fiber Optic ST)
RX: Receiver (Fiber Optic ST)


Terminal Definition

Terminal pins assignment:

Terminal pins assignment:

	CIII						
	1		V+	24V DC V+ Power input			
	2						
	3		V-	24V DC V- Power input			
	4						
	5						
	6						
	7						
	8		GND				
	9		D+	TxD+ data wire			
	0		D-	RxD- data wire			
- 1							

2.3Install Application

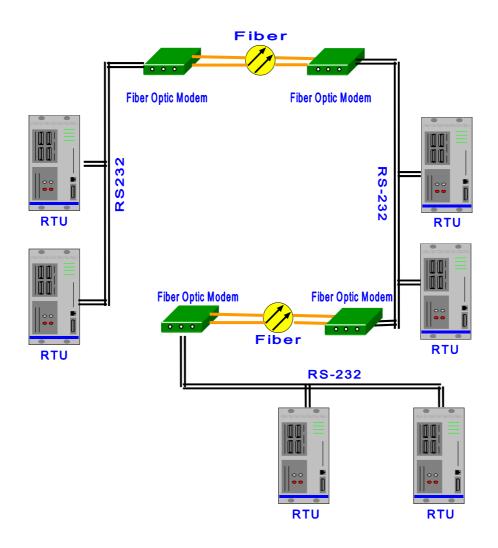

Install Application

3 Dimensions (mm)

3 Dimensions (mm)

Wall Mount:

