www.buenoptic.com

# Hardware Installation Guide


## DIN-Rail Industrial Fiber Media Converter

## Package Checklist

The HFD-FO-100M is shipped with the following items. If any of these items are missing or damaged, please contact your customer service representative for assistance.

- ✓ 1 Industrial Media Converter
- √ Hardware Installation Guide

#### 1. Panel Layout

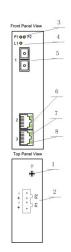

- 1 Grounding screw
- 2 Power input (P1/P2)
- 3 Power Input LED
- 4 Fiber Link/Activity LED
- 5 100BaseFX ports
- 6 10/100BaseT(X) RJ45 ports
- 7 Link LED
- 8 Speed LED

## 2. Installation


#### 2.1 Grounding the converter

Run the round connection from the ground screw to the grounding surface prior to connecting devices.

#### 2.2 Connecting to Power

The switch requires power via its four-pin connector. The keyed plug is removable and is included with the switch.

Input Voltage is 12-36 VDV.

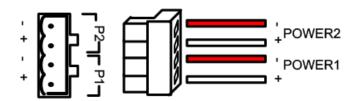

#### 2.3 DIN-Rail Mounting

Insert the top of the DIN-Rail into the slot just below the stiff metal spring and the DIN-Rail attachment unit will snap into place as shown.



#### 2.4 Connecting to the network

Attach network cables to the switch according to the requirements.

## 3. LED Description

LED	Status	Description	
PWR	Green	Power Applied	
rwn	0ff	No Power	
	Green	Fiber Link	
Fiber LED	Blinking	Fiber Activity	
	0ff	No connection	

Copper	Green	100Mbps	
SPD LED	0ff	10Mbps	
C	Green	Link	
Copper LNK LED	Blinking	Activity	
LINK LED	0ff	No connection	

## 4. Ports

✓ The RJ45 copper ports are defined as follows:

MDI Port Pinouts		MDI-X Port Pinouts		s 8-pin RJ45	
	Pin	Signal	Pin	Signal	
	1	Tx+	1	Rx+	1 8
	2	Tx-	2	Rx-	
	3	Rx+	3	Tx+	
	6	Rx-	6	Tx-	

## ✓ 100Base FX Fiber

Remember to connect the Tx (transmit) port of device I to the Rx (receive) port of device II, and the Rx (receive) port of device I to the Tx (transmit) port of device II.