

DeviceNet Fiber Optic Converter

User Manual

Table of Contents

1. Overview	3
1.1 Introduction	3
1.2 Technical Specification.....	3
1.3 Warranty	4
2. Installation	5
2.1 Package Contents	5
2.2 Enclosure	5
2.3 Install Method.....	7
3. Dimensions	9

1. Overview

1.1 Introduction

The No-Cascading new Devicenet Fiber Optic Converter is a multi-master and high performance Field bus Control System (FCS). The modular fiber optic transmission system can be used to transmit CAN-based bus systems such as DeviceNet or CANOpen via fiber optics data interfaces over a pair of multimode or single mode optical fibers. Our FMC Fiber Optic Converter uses the fiber cable as its transmission medium and utilizes Optical Fiber modulation/demodulation technology to changes the electric medium into a light medium transmission.

The Fiber Optic Converter product eliminates many of the disadvantages of copper cable. Examples of these disadvantages are EMI/RFI, ground loops (electrical isolation with fiber), high attenuation (high signal loss), short transmission distance between nodes of a system, and potential lightning damage.

The Fiber Optic Converter can be widely used, such as Industrial Controls, Intelligent Transportation Systems (ITS), Industrial Networking, Supervisory Control and Data (SCADA) and so on.

1.2 Technical Specification

CAN BUS	
Connectors	Block Terminal
Standard	CAN1.0, CAN2.0
Data Rate	125K,250K,500K, 1Mbps
Extended Distance	SM:0~20Km MM:0~2Km

OPTICAL	
Number of Fibers	2
Wavelength	1310/1550nm(SM), 850/1310nm(MM)
Fiber Type	62.5/125μm(MM), 9/125μm(SM)
Distance	0 ~ 2Km(MM) , 0~20 Km(SM)
Connector Type	ST/PC or SC/FC as options

GENERAL	
Operating Temperature	-30~ 70°C / -30 ~ +158°F
Operating Humidity	0 ~ 95% non-condensing
Mean Time Between Failure (MTBF)	> 70,000hrs
Power Supply Adaptor	DC 9~40V
Dimensions (H ×L×W)	112(H)×147(W)×36(D)MM

1.3 Warranty

- Repair
 - Please contact your local distributors when product is defective. Please apply RA in advance and prepay shipping cost when returning the defective product to us. We will pay the cost for sending it back to you.
 - Please attach a statement clearly describing the problem.
- We will repair defective product under warranty free of charge to our customer.
- 2 years warranty for product only.
- Any unauthorized modification of hardware and software voids the warranty.
- Warranty does not cover mishandling and/or abuse of the product.

2 Installation

2.1 Package Contents


- Fiber Optic Converter
- CD

Please contact dealer or distributor if part is missing or damaged.

2.2 Enclosure



Panel 1:

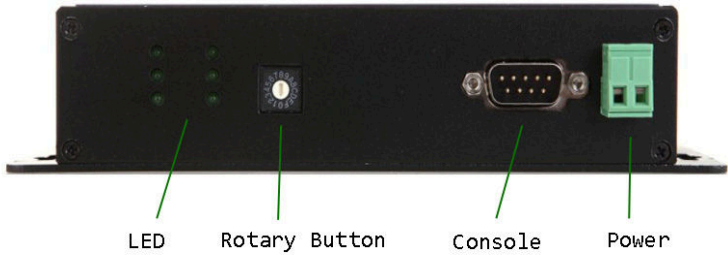

LED:


LED No	LED For	LED Name	LED Function
1	CAN0	TX	Transmitting
2		RX	Receiving
3		Error	Failure
1	Fiber0	TX	Transmitting
2		RX	Receiving
3		Error	Failure

USER MANUAL

Others:

Name	Relevant	Function	Remarks
Baudrate	CAN0	Rotary button	Configure baud rate by button,fast configuration
RS232	CAN0	Console port	Configure baud rate by software on computer
VCC		V+ Power input	DC 9~40V, With SPD,RCP,OCP
GND		V- Power input	DC 9~40V,With SPD,RCP,OCP

Panel 2:

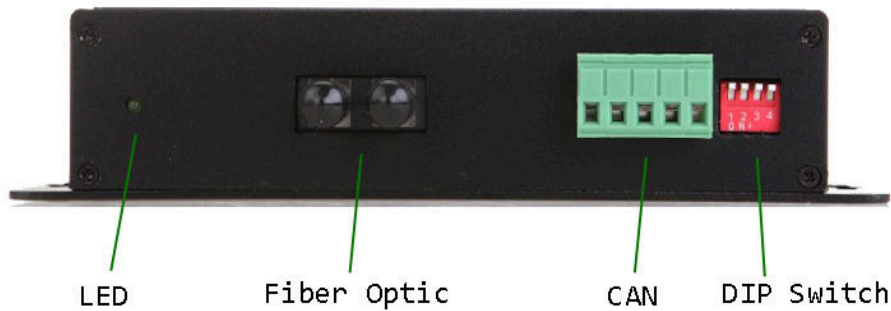

Port Name	Relevant	Function	Remarks
SYS		System LED	
TX	Fiber0	Transmit	Fiber optic connector TX
RX	Fiber0	Receive	Fiber optic connector RX
CANH	CAN0	CANH	CAN copper port
CANL	CAN0	CANL	CAN copper port
R+	CAN0	R+ Terminal resistance	Not necessary in normal condition
FG	CAN0	Grounding	Not necessary
R-	CAN0	R- Terminal resistance	Not necessary in normal condition
SW0-SW2		DIP Switch button	Button 4 on for 120Ohm resistance

Note: Devicenet has the same physical layer as CAN, so interface is the same as CAN too.

USER MANUAL

2.3 Install Methods

1. Switch off all power supply before installation.
2. Connect the local "TX" Fiber Optic to the remote "RX" Fiber Optic, the local "RX" to the remote "TX". And ensure that fiber is properly aligned to the receiving connector.
3. Connect the "**D0+**" Data of the CANH and the "**D0-**" Data to the CANL. Then screw down the bolt.
4. On the bottom of the Converter, there is a DIP Switch., When the SW0 is "ON",it's connected to 120 Ohm terminal resistance .

DIP Switch setup table:

DIP Switch pin name	SW0	Others
Setup State	OFF	OFF


120 ohm Terminal Resistance

DIP Switch pin name	SW0	Others
Setup State	ON	OFF

Baud rate rotary switch button setup table:

"B0 Button Position	9	8	7	6	5	4	3	2	1	0
CAN Baud Rate	80Kbps	100Kbps	125Kbps	200Kbps	250Kbps	400Kbps	500Kbps	666Kbps	800Kbps	1000Kbps
	A	B	C	D	E	F				
	50Kbps	40Kbps	20Kbps	10Kbps	5Kbps	configuration				

2.4 Install Application

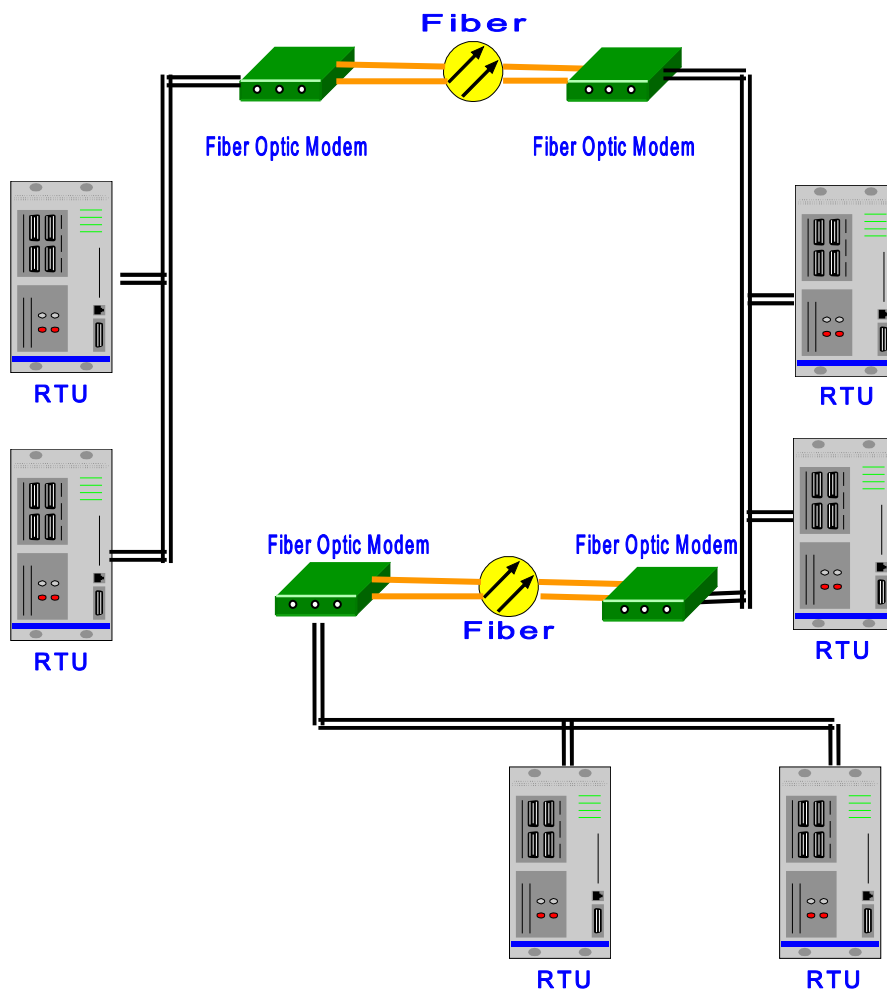

3 Dimensions (mm)

